

Wiring description

Pin	4-pin socket					
1	U frequency converter phase					
2	V frequency converter phase					
3	W frequency converter phase					
4	Wiring ground					

- 1. The electric main shaft shall be installed at the clamped position; otherwise the bearing will be easily damaged!
- 2. The compressed air shall be dry and clean, and the filtering accuracy shall be 0.1 micron! Atmospheric pressure is 0.1- 0.2MPa, and the air seal shall be normally open. It is recommended to use the two-level filtration, with the filtration accuracy of 0.5 micron/0.1 micron respectively, and the air filter shall have automatic discharge device.

											220 V
	Number of places	Zoning	Modified document number Standardized by	Signature	Date	Phase mark			Weight	Scale	Outline diagram
Reviewed by Processe by			Approved by			Tota	al pa	ge(s)	P	age	GDK105 drilling press spindle