

Special warning:

- 1. The electric main shaft shall be installed at the clamped position; otherwise the bearing will be easily damaged!
- 2. The compressed air shall be dry and clean, and the filtering accuracy shall be 0.1 micron! Atmospheric pressure is 0.1- 0.2MPa, and the air seal shall be normally open. It is recommended to use the two-level filtration, with the filtration accuracy of 0.5 micron/0.1 micron respectively, and the air filter shall have automatic discharge device.

												Six-pole constant torque 380V
Marks Designe by	Number of places	Zoning	Modified locument number Standardized by	Signature	Date	F	Phase	e mark		Weight	Scale	Outline diagram
Reviewe												GDK125-18Z/7.5
Processe by	ed		Approved by			Total page(s)		Page				

Wiring description

Pin	4-pin socket						
1	U frequency converter phase						
2	V frequency converter phase						
3	W frequency converter phase						
4	Wiring ground						