


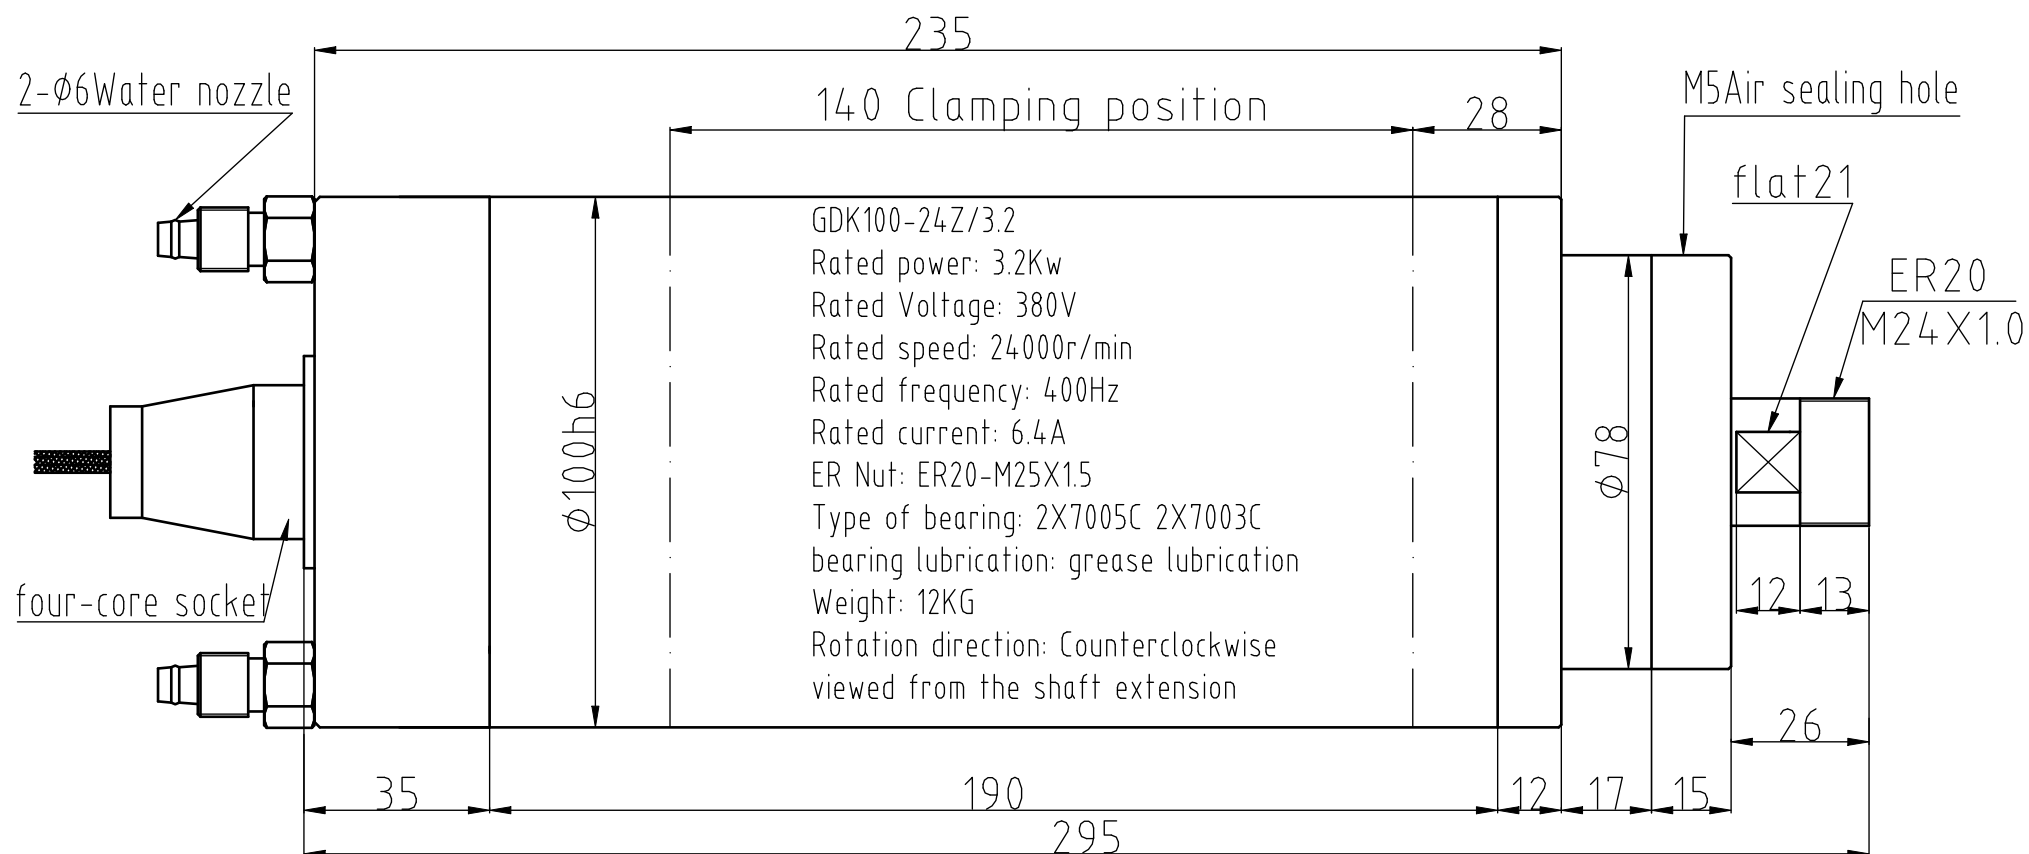

Special warning:

- 1.The spindle shall be mounted to the clamping position;otherwise it would damage the bearing!
- 2.The compressed air shall be clean and dry with filtering precision of 0.1 μm ! Air pressure: 0.1-0.2MPa.Air sealing shall be normally open.It is recommended to apply two levels of filtering with precisions of 5 μm /0.1 μm , and the filter shall be equipped with automatic drainage.

Wiring description

Pins	four-core socket
1	U-converter phase
2	V-converter phase
3	W-converter phase
4	Grounding wire $\oplus$