



## Wiring description

Pins	four-core socket
1	U-converter phase
2	V-converter phase
3	W-converter phase
4	Grounding wire 

### Special warning:

- 1.The spindle shall be mounted to the clamping position;otherwise it would damage the bearing!
- 2.The compressed air shall be clean and dry with filtering precision of  $0.1\mu\text{m}$ . Air pressure:  $0.1\text{--}0.2\text{MPa}$ .Air sealing shall be normally open.It is recommended to apply two levels of filtering with precisions of  $5\mu\text{m}/0.1\mu\text{m}$ , and the filter shall be equipped with automatic drainage.